



## What to Know Before Getting Started

**NOTE:** Make sure the threshold is level.



### We're Here to Help

At Krieger, we understand every project is unique. If after reviewing this guide, you have any questions or concerns about installing, adjusting, or maintaining your Krieger product, our engineering department is here to help.

Please call us directly at **562-695-0645** or reach out to your regional sales representative.

Visit [kriegerproducts.com/contact/](https://www.kriegerproducts.com/contact/) for more information.



### Made in the USA

All Krieger products are proudly designed and manufactured in the United States.


## Radio Frequency (RF) Door Bottom Adjustment

### STEP 1

- Close the door, making sure that the lock is in the latched position and that there is no play in the door

### STEP 2

- Remove the retainer screws (A) and remove the retainer (B).
- Remove the stainless steel mesh monel seal (C) to reveal a metalized fabric (D).
- Make sure the semi-rigid metalized fabric makes contact with the threshold.

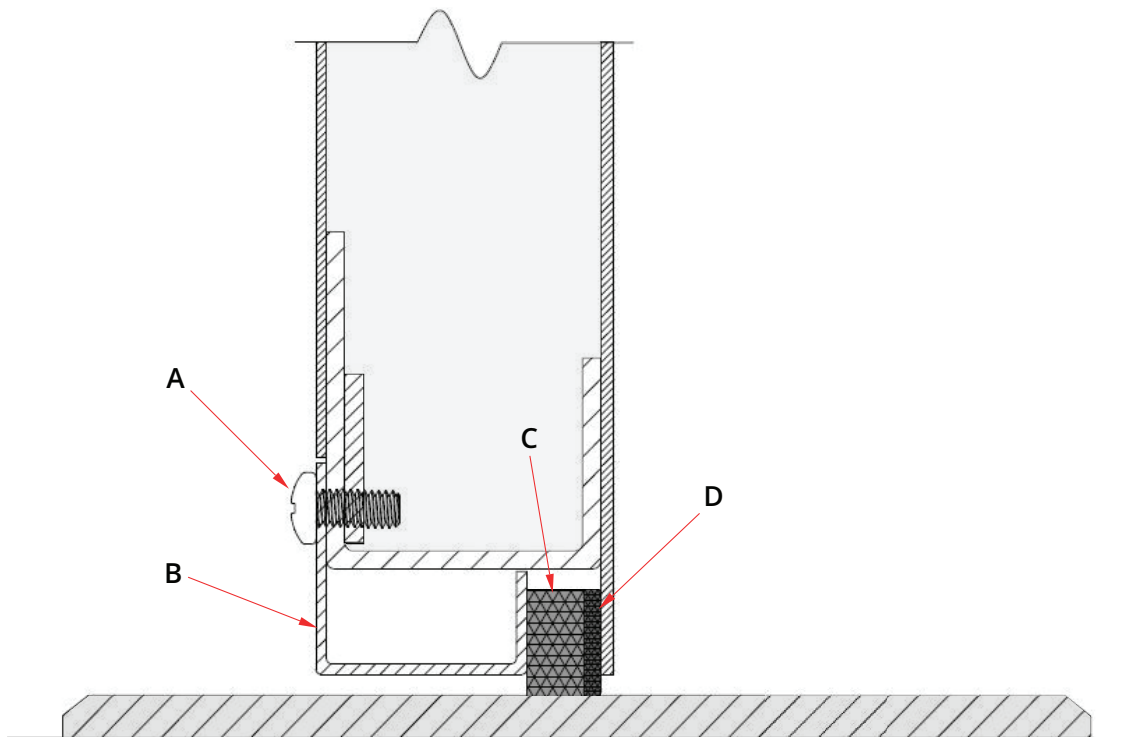


### STEP 3

- Place the wire mesh monel seal (C) back in place.
- Reattach the retainer (B) and firmly tighten the retainer screws (A).

### STEP 4

- After adjusting RF seal, close the door several times and re-check the adjustment with the thin plastic card enclosed. When the seals are properly adjusted, the card should slip between the threshold (E) and RF seal (C). The card should fit snugly, but not so tight that the card is difficult to remove or bend upon insertion.

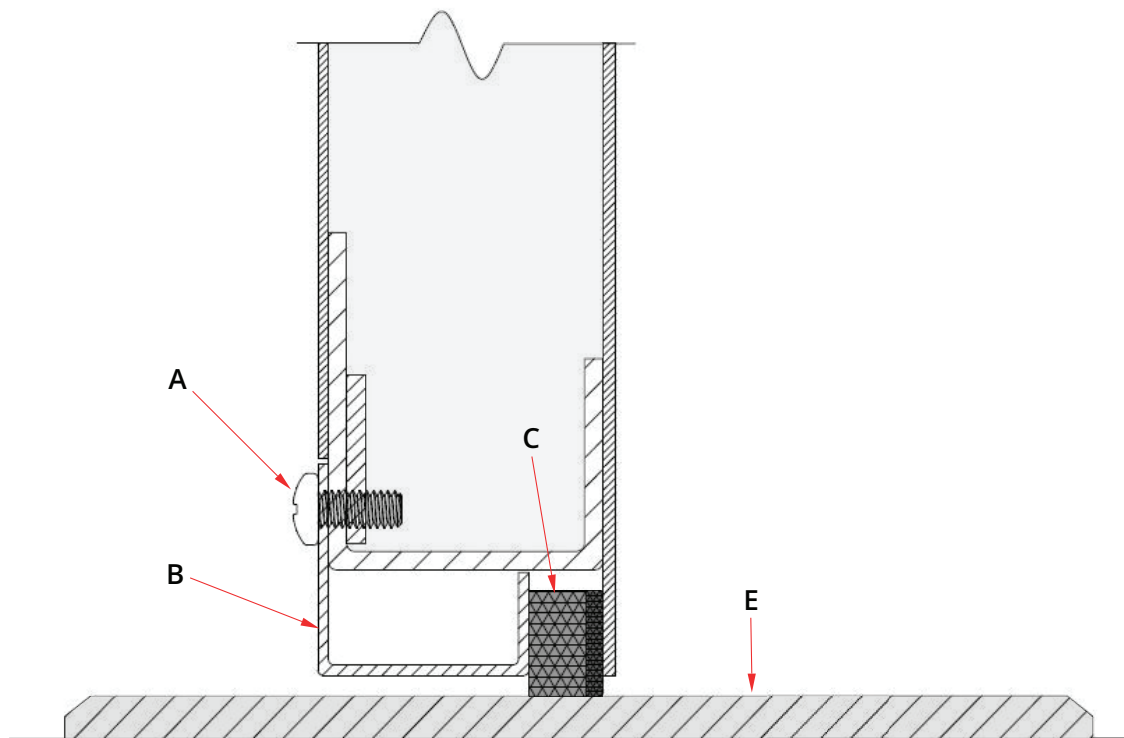

End Instructions