

Job Installation Notes

1. Astragals are shipped loose for application to the doors after they have been hung and the thresholds have been installed.
2. Layout astragal and hardware prior to installation. May require to notch astragal to apply hardware.
3. Note that the factory sized astragals are of slightly different lengths and the active door astragal is longer than the inactive.
4. Measure from bottom of the door to top of the threshold. Trim the neoprene insert at the bottom to make contact with the top of the threshold. Make sure the top of the neoprene will overlap the face of the frame by 1/8".
5. If doors are misaligned, a shim should be placed between astragal and door and adjusted by tightening the screw. Caulk after adjustment.
6. If any questions should arise, please contact Krieger Steel's Engineering Department at (562) 695-0645 for assistance before proceeding.

12 GAUGE ASTRAGAL MOUNTED ON
'PUSH SIDE' OF THE INACTIVE DOOR.
 ATTACH WITH 1/4" - 20 T.H.M.S. AT 12" O.C.
 AND 3 1/2" FROM ENDS.

