


ACOUSTICAL DOOR ASTRAGAL INSTALLATION

INSTALLATION INSTRUCTIONS

- Astragals are shipped loose for application after the doors are hung and the thresholds have been installed.
- Layout astragal and hardware prior to installation.
- **Note:** The active door astragal is longer than the inactive.
- Measure from the bottom of the door to the top of the threshold. Trim the neoprene insert at the bottom to make contact with the top of the threshold. Make sure the top of the neoprene will overlap the face of the frame by 1/8" on the pull side.
- To adjust the astragal inward you can shim accordingly behind the mounting screws.

Single

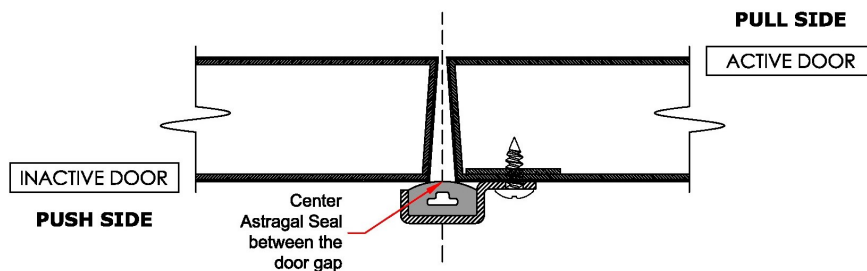

Double

