

## RF DOOR BOTTOM ADJUSTMENT

### RF DOOR BOTTOM ADJUSTMENT

- THE THRESHOLD MUST BE LEVEL
- Close the door, make sure that the lock is in the latched position and that there is no play in the door.
- Remove the retainer screws (A) and remove the retainer (B)
- Remove the stainless steel mesh Monel seal (C) to reveal a metalized fabric (D). Make sure semi rigid metalized fabric makes contact with the threshold. Place the wire mesh Monel seal (C) back in place.
- Reattach the retainer (B) and firmly tighten the retainer screws (A).
- After adjusting RF seal, close the door several times and re-check the adjustment with the thin plastic card enclosed. When the seals are properly adjusted, the card should slip between the threshold (E) and RF seal (C). The card should fit snugly, but not so tight that the card is difficult to remove or bend upon insertion.

