

Acoustical Door Astragal Installation



What to Know Before Getting Started

NOTE: Astragals are shipped loose for application after the doors are hung and the thresholds have been installed.



We're Here to Help

At Krieger, we understand every project is unique. If after reviewing this guide, you have any questions or concerns about installing, adjusting, or maintaining your Krieger product, our engineering department is here to help.

Please call us directly at **562-695-0645** or reach out to your regional sales representative.

Visit **kriegerproducts.com/contact/** for more information.



Made in the USA

All Krieger products are proudly designed and manufactured in the United States.



Rev. 010524

Insta	llation	Instri	uctions
บบรเล	IIauoii	บบรณ	よしいしいろ

STEP 1

- Lay out the astragal and hardware prior to installation.
- **NOTE:** The active door astragal is longer than the inactive door astragal.

STEP 2


- Measure from the bottom of the door to the top of the threshold.
- Trim the neoprene insert at the bottom to make contact with the top of the threshold.
- Make sure the top of the neoprene will overlap the face of the frame by 1/8" on the pull side.




Rev. 010524

STEP 3

• To adjust the astragal inward you can shim accordingly behind the mounting screws.

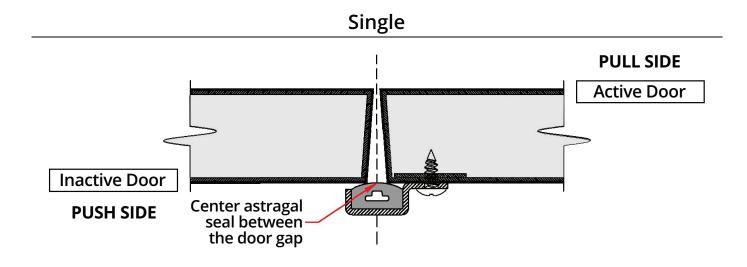

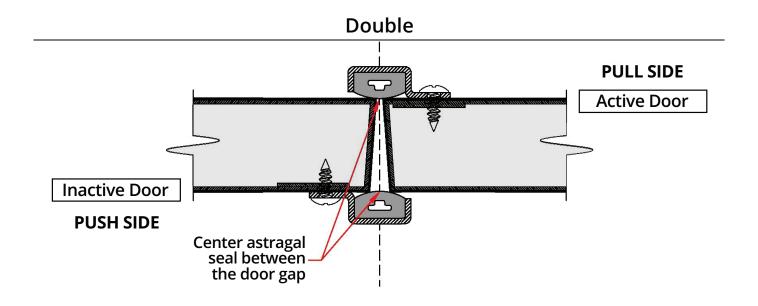

End Instructions



Rev. 010524