

INSTRUCTIONS FOR ADJUSTING KRIEGERSONIC NC6 MAGNETIC PERIMETER SEALS

WARNING REGARDING PAINT AND VINYL SEALS


All paint applied to the doors and frames should be completely cured BEFORE adjusting sound seals. Please be sure to use Low VOC solvent or water based paint to reduce paint outgassing from breaking down the gasket seal.

MAGNETIC SEAL ADJUSTING INSTRUCTIONS

- Begin by removing all caps (A) from retainers (D) beginning with the header. Close and latch the door.
- Loosen the retainer screws (B) from the slotted holes (C). Slide the loose seal forward until the magnetic surface makes contact with the door. Work your way around the door pressing the seal against the door while tightening each screw. Be sure to check that the seal is not pressed too tightly against the door as this may cause latching issues.
- Check the gap between the door and the seal with the plastic card provided (F). If there is a gap in a section of the seal then loosen the screw closest to adjust it. With a wood block (E) you can tap the section of the seal tight where it does not make contact. Then retighten the screw. The card should fit snug along the entire perimeter of the door.

Strike Side

Hinge Side

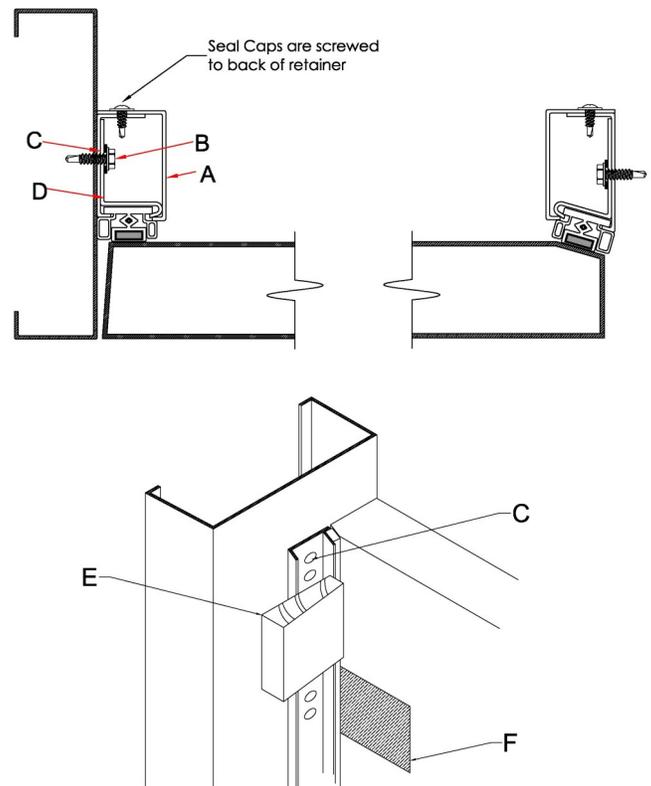

- Check the door seal by firmly closing the door several times and rechecking for positive contact around perimeter of the door. After final adjustment install several #10 sheet metal screws provided between the slotted hole to lock the retainer in place. Finally, check for any light leaks between the frame and retainer or at the mitered corners. Adjust accordingly.
- **NEVER MOUNT ANY HARDWARE ON THE SOUND SEAL COVERS!**