

## DUAL CAM-LIFT DOOR BOTTOM ADJUSTMENT

### DUAL CAM-LIFT DOOR BOTTOM SEAL

- The door bottom assembly (A) is shipped installed on the door.
- With the door in the closed position loosen the door bottom screws (C). Lower the door bottom until the neoprene seal (B) makes full contact the entire width of the threshold.
- Firmly tighten the attachment screws
- Open and close the door several times and check the adjustment with the thin plastic card provided. When the seals are properly adjusted, the card should slip between the sill and the seal. The card should fit snugly, but not so tight that the card is difficult to remove or bend upon insertion.
- The seals should extend approximately 1/8" (+/-) beyond the door on each side. The neoprene is a double seal and should be cut accurately at each end to fit snugly against the frame and the jamb seal.
- Sand, plaster, or other construction debris will damage the neoprene seal. It is crucial to keep the area around the doors clean once installed and/or adjusted.
- Once the door bottom seal has been adjusted, apply acoustic sealant in the slotted adjustment holes (D)

**Note: Do not place wedges, electrical cords, etc. under the door bottoms. This will damage or tear the neoprene.**

