

INSTRUCTIONS FOR ADJUSTING SLIDER WINDOWS

Krieger Specialty Products slider windows may need to be adjusted upon installation. Every slider assembly comes with a set of high-capacity ball transfer units on the top and bottom of the slider portion. The ball transfer units must sit within the built-in guides in the window frame to operate smoothly and effectively.

To adjust the transfer units, simply rotate to move them up and down until all four units can sit securely inside the frame guides.

