

INSTRUCTIONS FOR RF DOOR BOTTOM ADJUSTMENT (1 3/4" THICK PANEL)

NOTE: Before proceeding make sure the threshold is level. Note: Do not place wedges, electrical cords, etc. under the door bottoms. This will damage or tear the silicone.

CAM LIFT DOOR BOTTOM SEAL

- With the door in the closed position loosen the door bottom screws (A).
- Adjust the door bottom down until the silicone seal (B) makes full contact with the threshold and firmly tighten the screws (A). Ensure the fabric over foam (C) extends slightly past the silicone.
- The RF seals (B) should be trimmed to extend beyond the door at least 1/8" each side, more if required to yield overlapping fitment with the jamb seals. **DO NOT CUT THE SEALS SHORT OR FLUSH WITH THE DOOR.**
- Open and close the door several times and check the adjustment with the thin plastic card provided. When the seals are properly adjusted, the card should slip between the sill and the seal. The card should fit snugly, but not so tight that the card is difficult to remove or bend upon insertion.
- The area around the door should be free from dirt and debris as this can damage the seal.
- Once the door bottom seal has been adjusted, apply EMI/RF caulking in the slotted adjustment holes and across the gap between the door bottom and the push side door skin, do not use acoustical caulking in this area on this product. Contact the factory with questions regarding product recommendations.

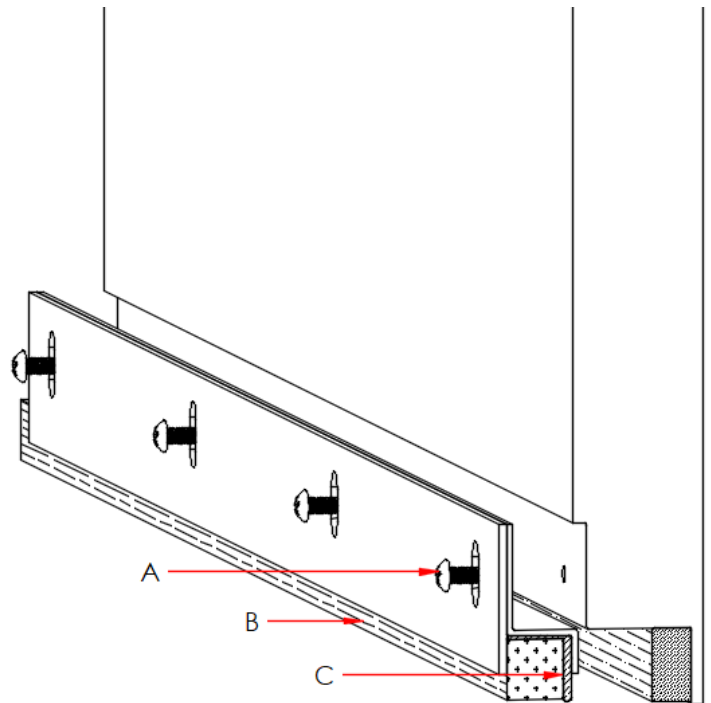


FIGURE A