



What to Know Before Getting Started

Refer to **Installation Guide 108** for instructions on re-adjusting seals:



Download guide

https://www.kriegerproducts.com/support/manuals/IG_108.pdf



We're Here to Help

At Krieger, we understand every project is unique. If after reviewing this guide, you have any questions or concerns about installing, adjusting, or maintaining your Krieger product, our engineering department is here to help.

Please call us directly at **562-695-0645** or reach out to your regional sales representative.

Visit [kriegerproducts.com/contact/](https://www.kriegerproducts.com/contact/) for more information.



Made in the USA

All Krieger products are proudly designed and manufactured in the United States.

Installation Instructions

STEP 1


- Remove seal caps, head piece first, which will expose the adjustable retainer with slotted holes, hex head screws, and washers.
- Removal of the steel retainer is not necessary if just replacing the vinyl seal.

STEP 2

- Notice that the corners of the vinyl are mitered and joined by hot melt process.
- Pull old vinyl out of the retainer and insert the new vinyl extrusion.
- When inserting the new vinyl seal into the retainer the vinyl may stretch. It will shrink back to the original length so allow for this when cutting. Note that the hinge jamb retainer is different than the strike or the head retainer.

STEP 3

- Start at the head (A): insert the outer part of the vinyl base into the steel retainer as shown.
- Then with a plastic “screwdriver” type tool (B) with rounded corners, work the outer leg of the vinyl (C) into the retainer.

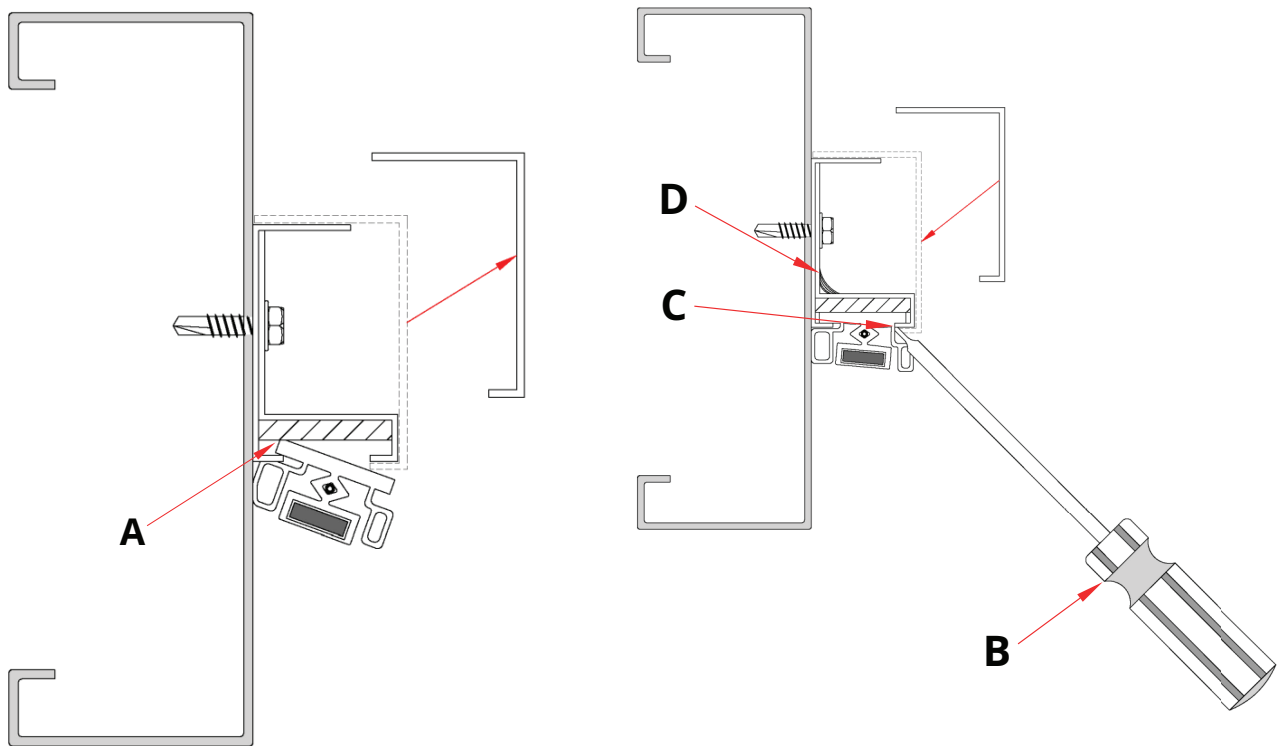

STEP 4

- Re-adjust the seals per **Installation Guide 108**.
- After adjusting the seals, caulk (D) all corner joints of the retainer before applying the caps.

End Instructions