



What to Know Before Getting Started

1. The following recommendations and precautions are intended to ensure a quality installation of Krieger products.
2. **NOTE:** This is a general reference guide and each installation is unique. Please contact Krieger for assistance with any specific installation questions.
3. Hollow metal doors and frames should generally be installed by qualified experienced journeyman carpenters.
4. The spreader on the bottom of the frame is for transportation only. **REMOVE PRIOR TO FRAME INSTALLATION.**
5. **WARNING:** Under no circumstances should frames be installed on carpet; this will cause sound transmission and prevent the frame from performing as designed.



We're Here to Help

At Krieger, we understand every project is unique. If after reviewing this guide, you have any questions or concerns about installing, adjusting, or maintaining your Krieger product, our engineering department is here to help.


Please call us at **562-695-0645** or reach out to your regional sales representative. Visit kriegerproducts.com/contact/ for more information.

Installation Instructions


STEP 1

- Frames must be installed square (1), plumb (2), in plane (3), and not twisted (4) in order to achieve proper door alignment and seal contact.

Squareness

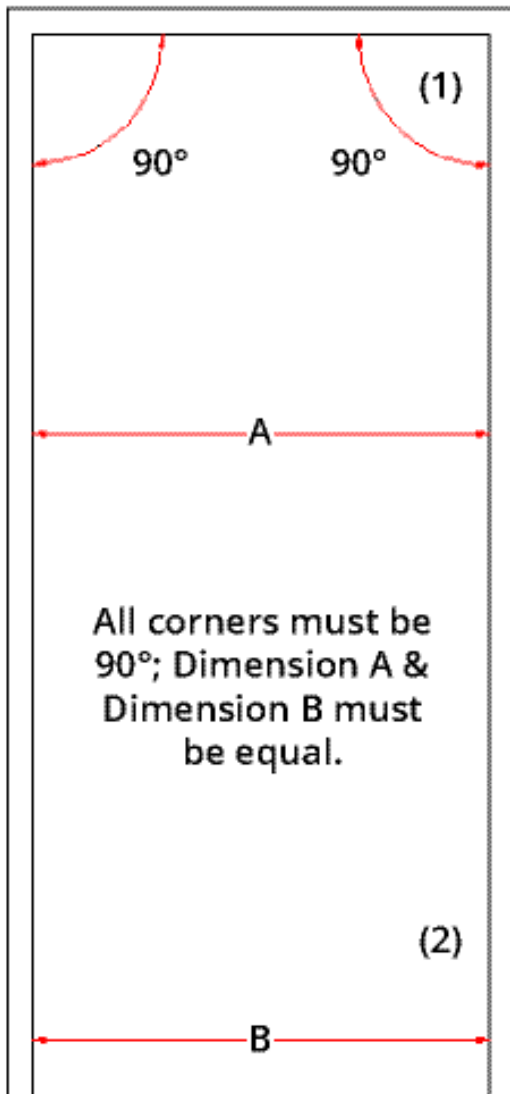

Plane

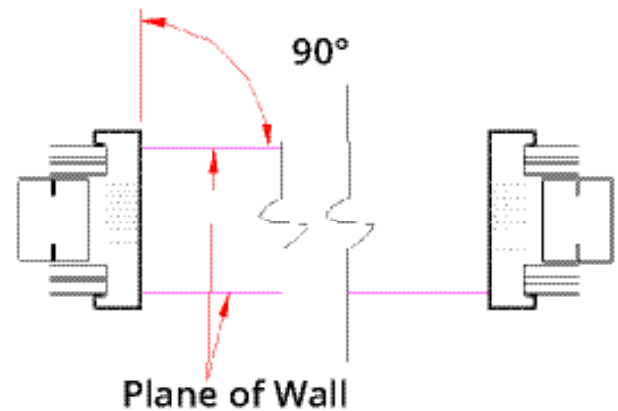

STEP 2

- Check the diagonal dimensions and “cross string” the frame to ensure that jambs are set correctly.
 - Anchor the frame securely to the walls utilizing all the anchor points.
-

STEP 3

- Acoustical frames must be filled with sound deadening material to achieve the required acoustical rating.
- We further recommend that caulking be applied to the frame return at the wall interface to ensure a good, continuous seal.

End Instructions