



What to Know Before Getting Started

NOTE: Review completed assembly below (and larger on the last page of this guide).

Completed Assembly



We're Here to Help

At Krieger, we understand every project is unique. If after reviewing this guide, you have any questions or concerns about installing, adjusting, or maintaining your Krieger product, our engineering department is here to help.

Please call us at **562-695-0645** or reach out to your regional sales representative. Visit kriegerproducts.com/contact/ for more information.

Installation Instructions


STEP 1

- Install base frame in wall.
- Install fasteners at hinge jamb first.
- Shim as needed.



STEP 2

- Install remaining fasteners, check plumb and level often.

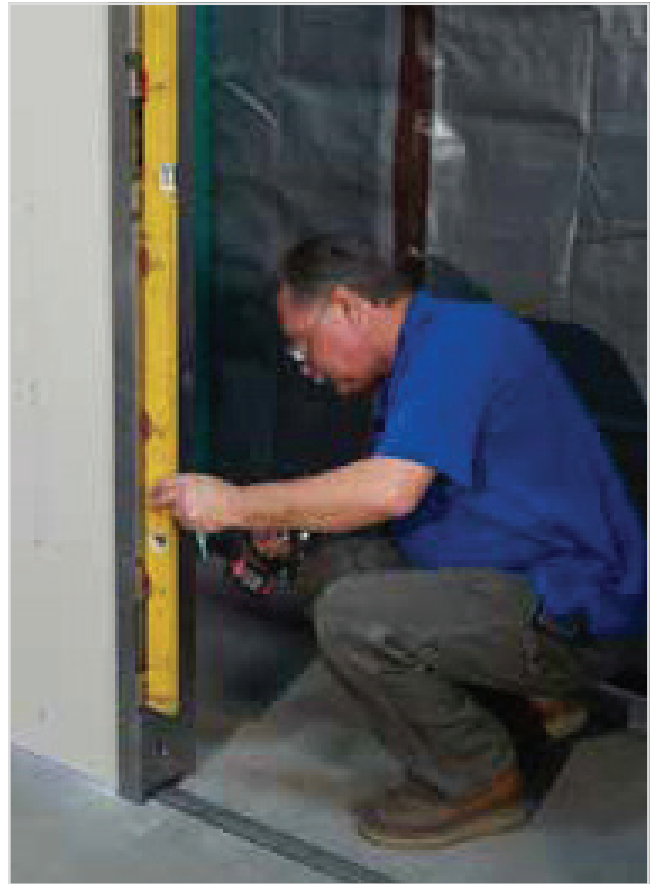

STEP 3

- Install insulation between base frame and wall framing.



STEP 4

- Fill all cavities with insulation.



STEP 5

- Remove spreader on trim side of frame.




STEP 6

- Install trim frame.



STEP 7

- Secure trim frame to base frame with #8 self-drilling screws.

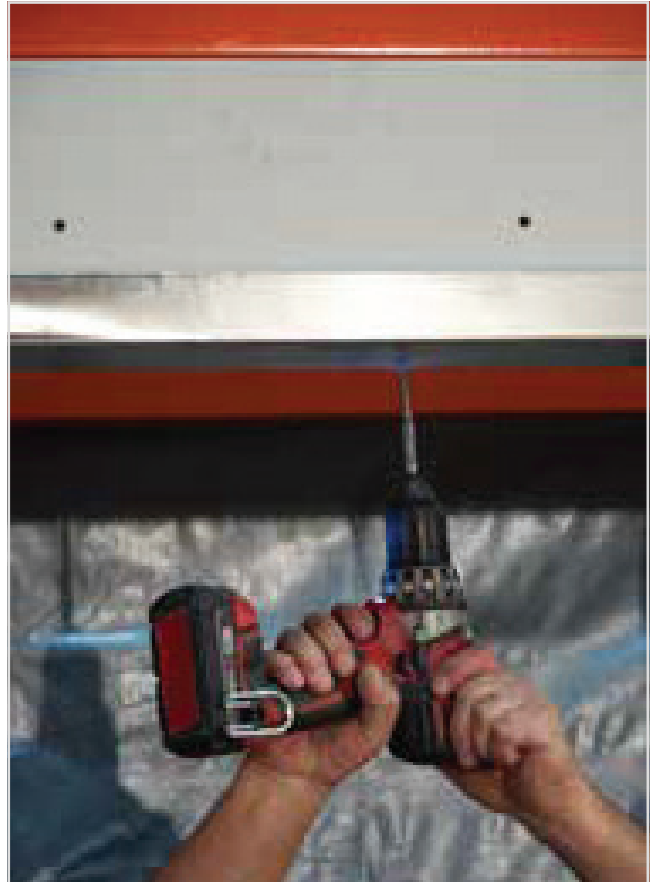

STEP 8

- Caulk base frame spreader bar along sides and top.



Rev. 010524

STEP 9

- Install threshold over spreader.



STEP 10

- Drill thru threshold and install fasteners.



STEP 11

- Install fasteners from top of threshold.
- **DO NOT** remove threshold for this step.



STEP 12

- Measure retainers and cut to size.
- **DO NOT** cut notched ends.




STEP 13

- Cut 1/8" shorter to allow clearance.



STEP 14

- Install retainers notched end up.
- Install retainers with #10 hex head self-drilling screws and rectangular washers.
- Washers should be installed parallel to retainers.

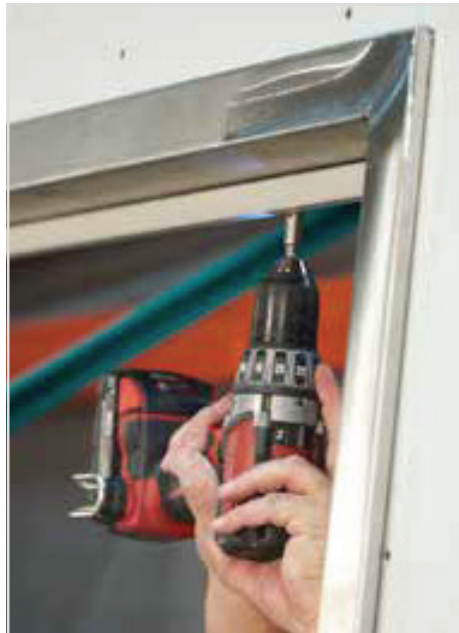

STEP 15

- Install seals, glue corners with super glue or contact cement.



STEP 16

- If using electrified hinge, install at center hinge location.



STEP 17

- Install hinges to frame.
- **DO NOT** split hinges.



STEP 18

- Install door, raise door up to hinges on frame.



STEP 19

- Install strike and begin seal adjustment.
- After seals are adjusted, remove strike to install seal caps.




STEP 20

- With seal retainer screws snug, adjust seals using flat blade screwdriver and hammer to make contact with door.

**STEP 21**


- Adjust door bottom by loosening screws and allow door bottom to contact threshold.

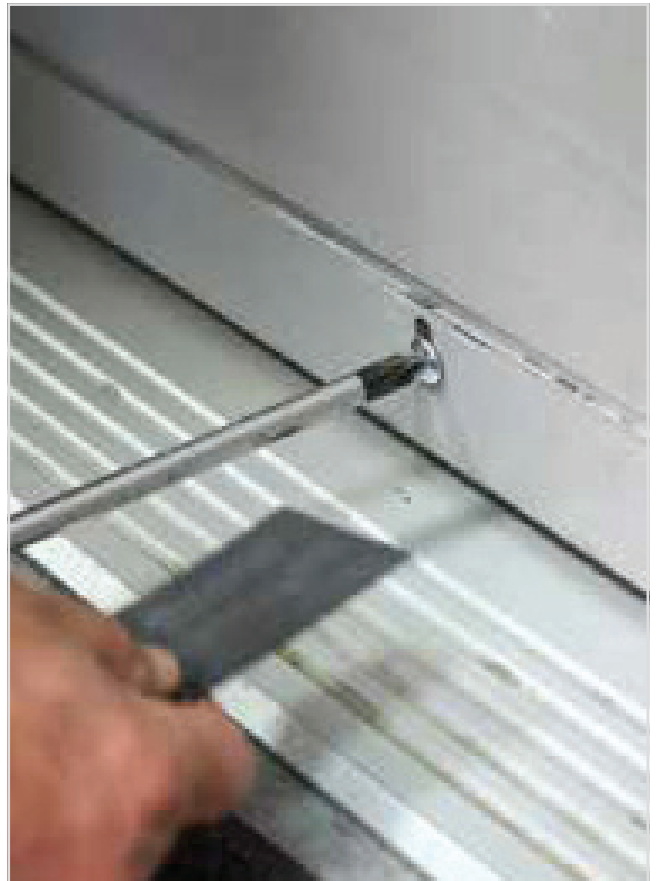

Rev. 010524


STEP 22

- Check seal adjustment with adjustment card.
- There should be slight pressure, but card should not bend or fold.

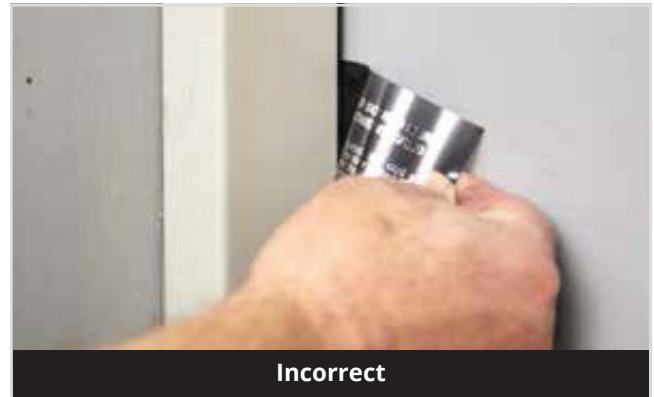

STEP 23

- Install seal caps with #8 tec screws.
- Install jamb legs first, then the head piece.

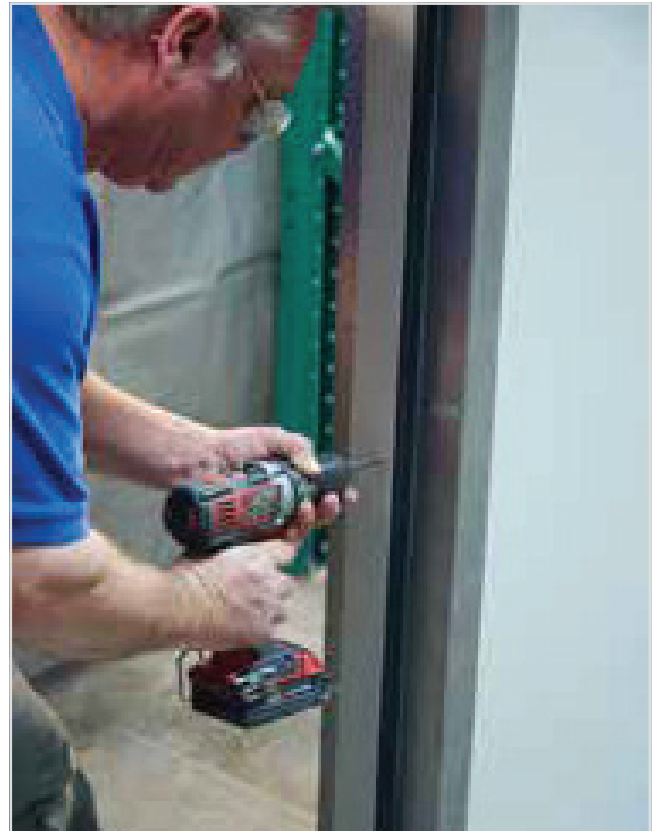

Rev. 010524

STEP 24

- Re-install strike.



STEP 25

- Caulk perimeter of frame where returns meet wall on both sides of frame.



Completed Assembly



End Instructions